



Daily Cleaning Checklist: Flight Type Dishwashers

Keep Your Equipment In Top Shape

The dishwasher **MUST** be thoroughly cleaned at the end of each working shift or after each meal. Push the **POWER** button on the keypad to turn the machine **OFF**. Follow the instructions below for the manual cleaning process.

WARNING: Disconnect the electrical power to the machine and follow lockout/tagout procedures. There may be multiple circuits. Be sure all circuits are disconnected.

1. Open all Front Access Doors

Drain the machine by swinging the tank drain handles to the left as shown on the labels located above each tank drain. Drain handles are located near the floor at the front of each tank.

2. Remove & Clean Curtains

Before removing the strainer baskets and pans, clean the interior and all tank shelves using a hose and a spray nozzle. Flush all debris toward the strainers.

3. Remove the Wash Arms

Remove the wash arms by lifting up on the arm clearing the tab from the notch in the wash arm support. Slide upper arms forward, swinging front of arm down. Slide lower arms forward, tilt front of arms upward to allow water to drain. Remove arms. Clean wash arms in a sink, opening wash arm sliders to flush food soil from arms.

4. Remove Strainer Baskets & Pans

Remove the strainer baskets and strainer pans. Also, remove the dual rinse strainer. Empty strainers in trash receptacle or food waste disposer. **DO NOT STRIKE STRAINER PANS OR STRAINER BASKETS ON SOLID OBJECT TO DISLODGE DEBRIS.** Scrub strainer pans and strainer baskets in a sink.

5. Remove Dual Rinse & Upper Final Rinse Arms

Remove both dual rinse and upper final rinse arms and clean debris from nozzles. Never use steel wool to clean warewasher surfaces. Use only products formulated to be safe on stainless steel. Flush tanks with a water hose, removing any accumulation of food soil.

6. Reinstall All Arms

Reinstall all arms in their proper location and orientation. Ensure that upper arm nozzles point downward, and lower arm nozzles point upward. To install wash arms, slide manifolds on the supports towards the rear of the machine and ensure the tabs on the sides of the arms drop into the notches in the supports.

7. Replace Strainer Baskets & Pans

Replace the strainer pans and strainer baskets. Reinstall the curtains according to the curtain chart shown on pages 15-23 of the Operator Manual. Leave the machine doors open to allow the interior to air out and dry.

8. Clean Machine Exterior

Clean machine exterior like any other stainless steel appliance. Use a damp cloth and mild soapy water.

9. Spray Sensor Channels

Spray the channels where sensors are located at the load end of the machine. Do not attempt to clean these with metallic objects as damage to sensors can occur.